 



Smart Curtain Motor Introduction

Terncy Smart Curtain Motor is a ZigBee endpoint accessory, that connects to Terncy Home Center ZigBee hub. It's designed to automate curtains, and help to protect home from sun damage, overheating and security threats.

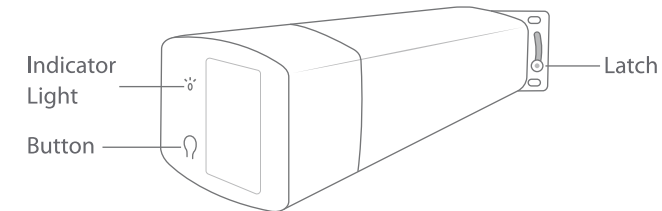

1

 
Indicator Light State

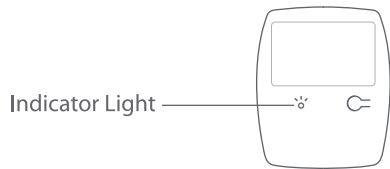

State	Green LED fast flashing (10 flashes per second)	Connecting to Home Center nearby
	Green LED slow flashing (1 flash every 2 seconds)	Successfully connected to Home Center
	Green LED medium flashing (4 flashes per second)	Failed to connect to Home Center

2

 
Physical Installation

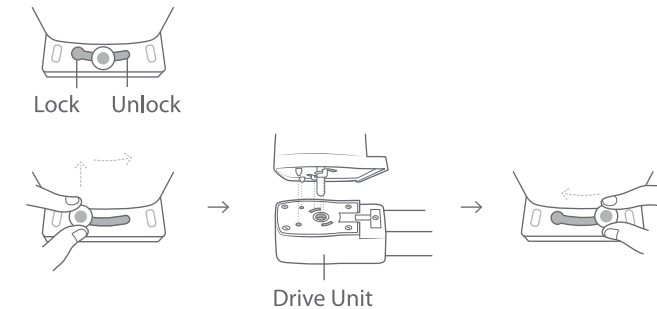

1. Hold up and pull the latch to the unlocked position before connecting.
2. Align the motor shaft to the square hole of the Drive Unit. Insert the shaft into the hole vertically.
3. Switch the latch back to the locked position. Ensure the motor is connected to the Drive Unit firmly.

3

 Physical Installation

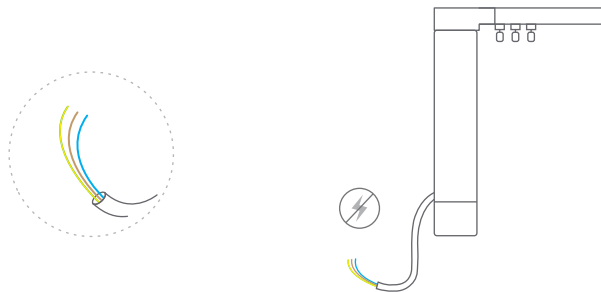


1. Cut down the power before wiring.
2. Wire by colors as illustrated.

4


Download and Install App

 Download Terncy app from application markets or scan the QR code below. Follow the direction in the app to connect your accessory to Home Center.

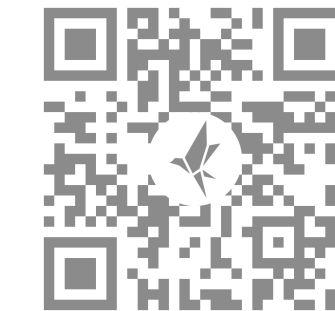

5

 Setup Accessory for The First Time

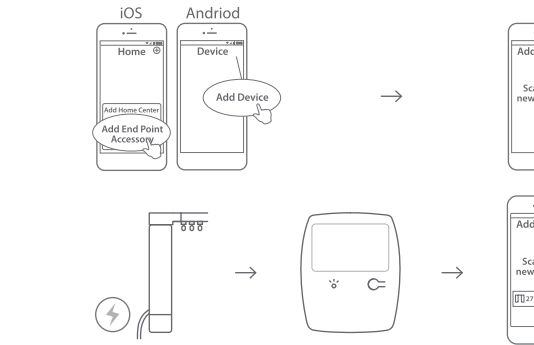

1. Navigate to "Add Device" page in the app.
2. Turn on power for the Smart Curtain Motor. The LED will start flashing green.
3. The app will automatically detect the accessory, typically within 5 seconds.

6



WeChat official account

 
 
 

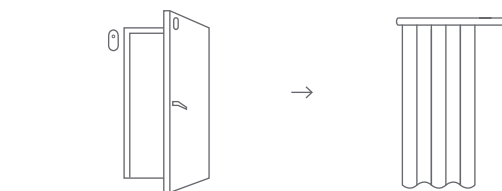 

Contact Us

Online Support: <http://www.xiaoyan.io/service>

E-mail: support@xiaoyan.io

Manufacturer: Shanghai Xiaoyan Technology Co., Ltd.

Address: Room 503, Building B, NO.2305, Zuchongzhi Road, Shanghai, China
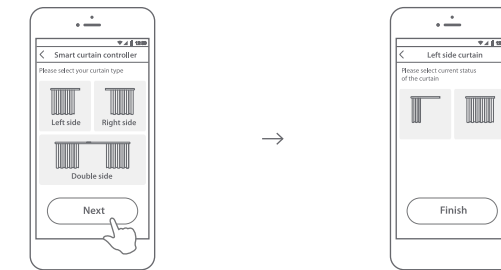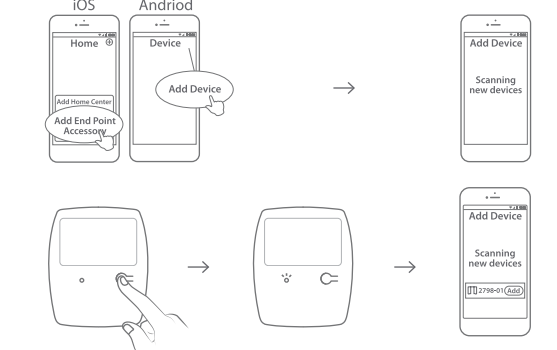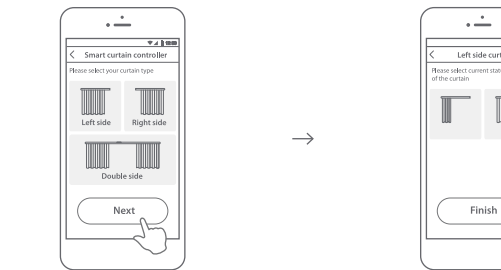
<h3>Setup Accessory for The First Time</h3>  <p>4. Follow the on-screen direction, select the curtain type to which the Smart Curtain Motor applied, and click “next”.</p> <p>5. Select current status of the curtain, and click “finish”.</p> <p>7</p>	<h3>Setup Accessory Again</h3>  <p>1. Navigate to “Add Device” page in the app.</p> <p>2. Press and hold the button for 6 seconds. The LED will start flashing green.</p> <p>3. The app will automatically detect the accessory, typically within 5 seconds.</p> <p>8</p>	<h3>Setup Accessory Again</h3>  <p>4. Follow the on-screen direction, select the curtain type to which the Smart Curtain Motor applied, and click “next”.</p> <p>5. Select current status of the curtain, and click “finish”.</p> <p>9</p>	<h3>Automation</h3> <p>(This function works properly with HomeKit only when meeting the requirements in Notes 2 of the latter part.)</p>  <p>Pulls open curtains with just one click of Awareness Switch.</p> <p>10</p>	<h3>Automation</h3> <p>(This function works properly with HomeKit only when meeting the requirements in Notes 2 of the latter part.)</p>  <p>Curtain will be pulled open automatically when opening the door.</p> <p>11</p>	<h3>Notes 1</h3> <ol style="list-style-type: none"> 1. Do not soak or wash your devices. 2. Keep products away from fire, high temperature or any other extreme environment. <h3>Notes 2</h3> <p>Home Center is required to enable Smart Curtain Motor to work with HomeKit technology. Visit http://www.xiaoyan.io for more details.</p> <p>12</p>
<div>  <h2>Manual of Terncy Smart Curtain Motor</h2> </div>					

Warranty Card

Xiaoyan's after-sales service includes:

Xiaoyan Tech shall remove any physical defects inherent in the device which are listed on the warranty card, free of charge, by replacing (at the sole discretion of Xiaoyan Tech) the defective device within the period of 15 days from the date of reception by the consumer, and by repairing the defective components of the device within the period of 36 months from the date of reception by the consumer.

*** The warranties may be varied in different countries and regions.**

The Warranty Applies to:

1. surface damages resulting from mishandling during transport or defects inherent in material or structure of the products;
2. failure of the buttons or indicator lights;
3. failure of wireless communication.

The Warranty Does Not Apply:

1. when the warranty period expired;
2. to damages resulting from repairing and introducing alterations by unauthorized persons;
3. to damages caused by using accessories not recommended by the manufacturer;
4. to damages resulting from other irresistible causes.